

NEO/AlphaSmart Printing

1. Be sure you have a word-processing file opened on your computer before sending information from the AlphaSmart/Neo to the computer.
2. Use black printer cable. Insert the USB (flat connector) into computer tower, (USB) or laptop. Look for matching symbol. This can go into where your flash drive goes.
3. Connect the square connector into the NEO/AlphaSmart. Turn the NEO/AlphaSmart keyboard on. A message will appear on the NEO stating USB connection, then another message: *Attached to PC, emulating keyboard. Press send to transfer "File #". Press Cmd-File key to switch to a different file.*
4. Now you can Press the "send" key. The information should come over onto the new word file that is open. You can print to a printer from there.

(Steps to print via Infra-Red are located in the manual. You will need to download AlphaSmart Manager for NEO software and follow the directions from there.)